

PILOT'S FAMILIARIZATION BRIEFING LIMB – Bresso Airport





OBJECTIVE

FIRST OF ALL... WELCOME!

Bresso Airport offers a wide range of activities for aircrafts and helicopters, such as leisure flights, transport of persons and goods, and many air connections.

This **Pilot's Familiarization Briefing** has been developed having in mind pilots and ground operator's needs to safely operate into Bresso Airport.





LEGAL DISCLAIMER

The use of this presentation does not subsitute knowledge of official documentation such as ICAO Regulations, AIP ITALIA and NOTAMs

All information published are property of Aero Club Milano.

All rights reserved

AIRPORT GENERAL INFORMATION

Airport Elevation	484f
Class of Airspace	Uncontrolled (G) - OI
AIS Services:	from 08:00LT to ep from 09:00LT to ep
Aerodrome fire fighting CAT:	CAT.
Fuel Type Available	AVGAS 100LL Refuelling alongside by ta Non-wheeled Helicopters
Distance from the city center	4.3 N

ft AMSL

Only VFR Traffic allowed

ephemeris (weekend) phemeris (weekdays)

2 - ICAO

JET A-1

anker may be subject to delay rs refuelling by tanker ONLY

IM (NNE)

PNR

PRIOR NOTIFICATION REQUIRED <u>IS MANDATORY</u>! Flight Operations in LIMB requires a **Prior Notification Permission (PNR)** in order to fly to or from LIMB. This is a **POLICE DISPOSITION:** non-complying crew and passengers may be subject to further police investigation.

03:00 HRS BEFORE ETA/EOBT


12:00 HRS BEFORE ETA/EOBT

12:00 HRS BEFORE ETA/EOBT






PNR LINK e submit the PNR using this form only. The PNR rece

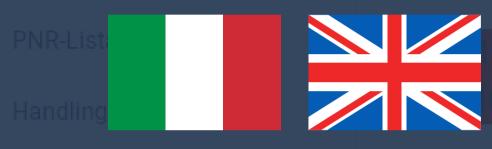

AVAILABLE IN ITALIAN & ENGLISH

CLICK HERE


TO SUBMIT YOUR PNR

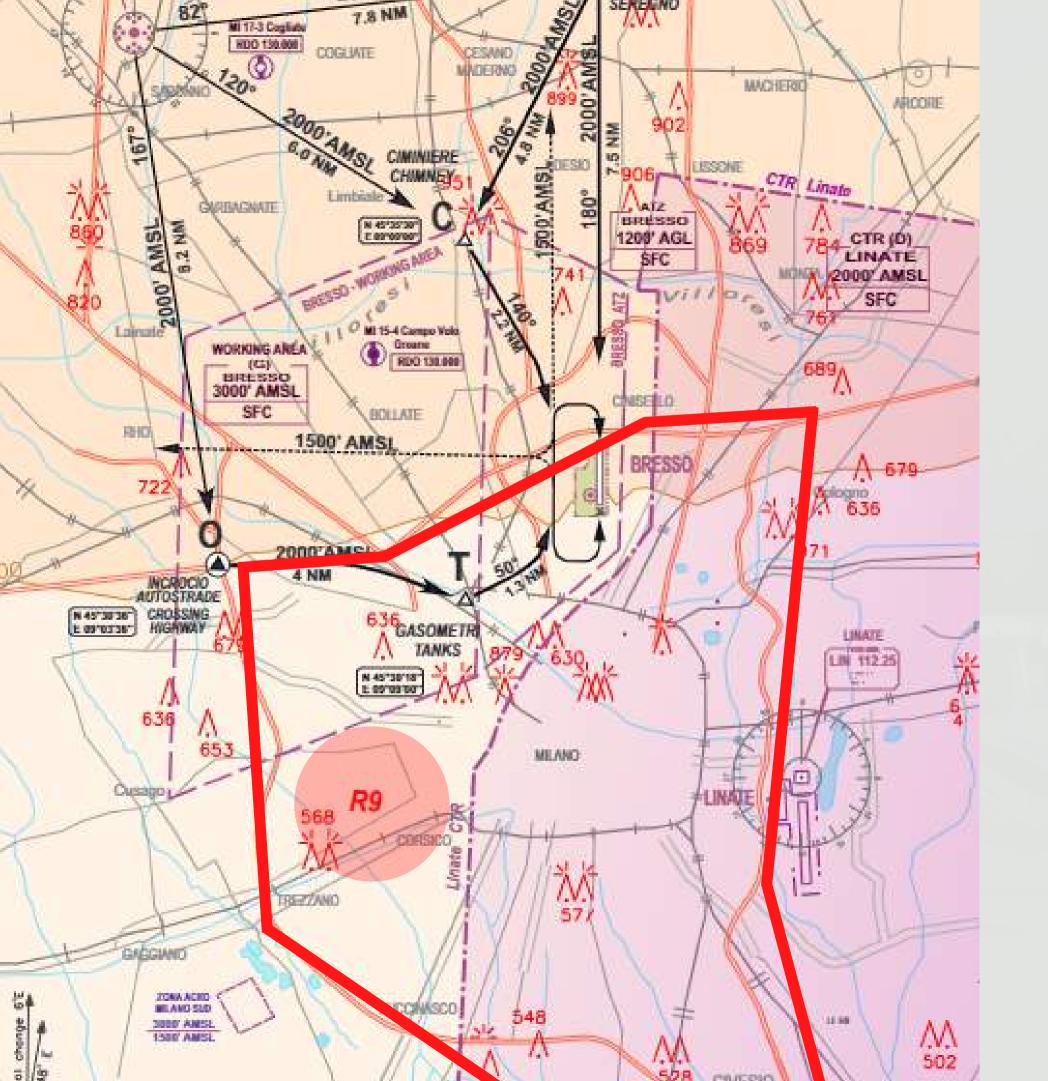

AIRSPACE GENERAL INFORMATION

TEM

MILAN CITY RESTRICTED AREA (R9)

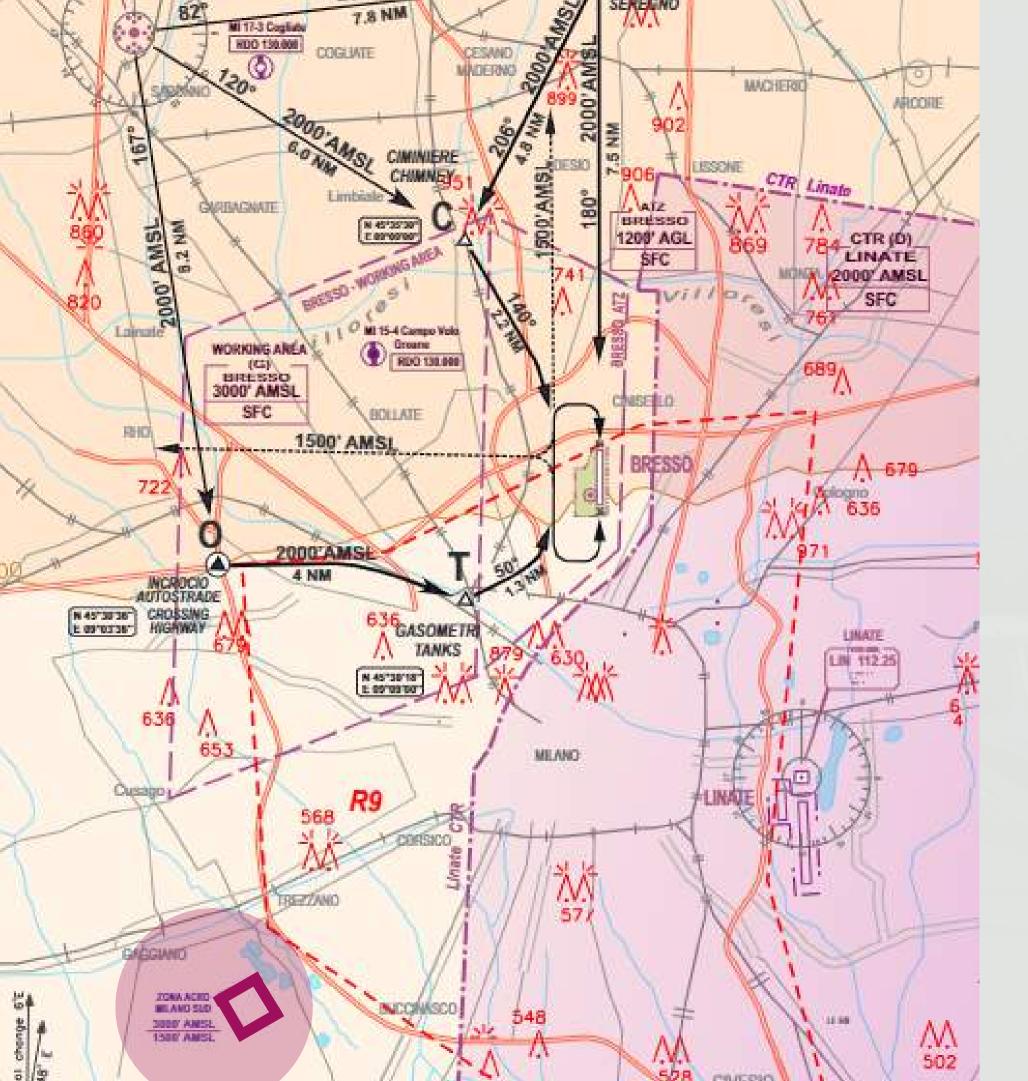


 Aerobatic traffic operating between 2000ft/3000ft AMSL in contact with Milano Information (124.925)
Avoid area at reccomended distance of at leadt 1NM E/W from airspace boundaries.

AIRSPACE GENERAL INFORMATION

MILANO SUD ACRO AREA

3000FT AMSL 2000FT AMSL

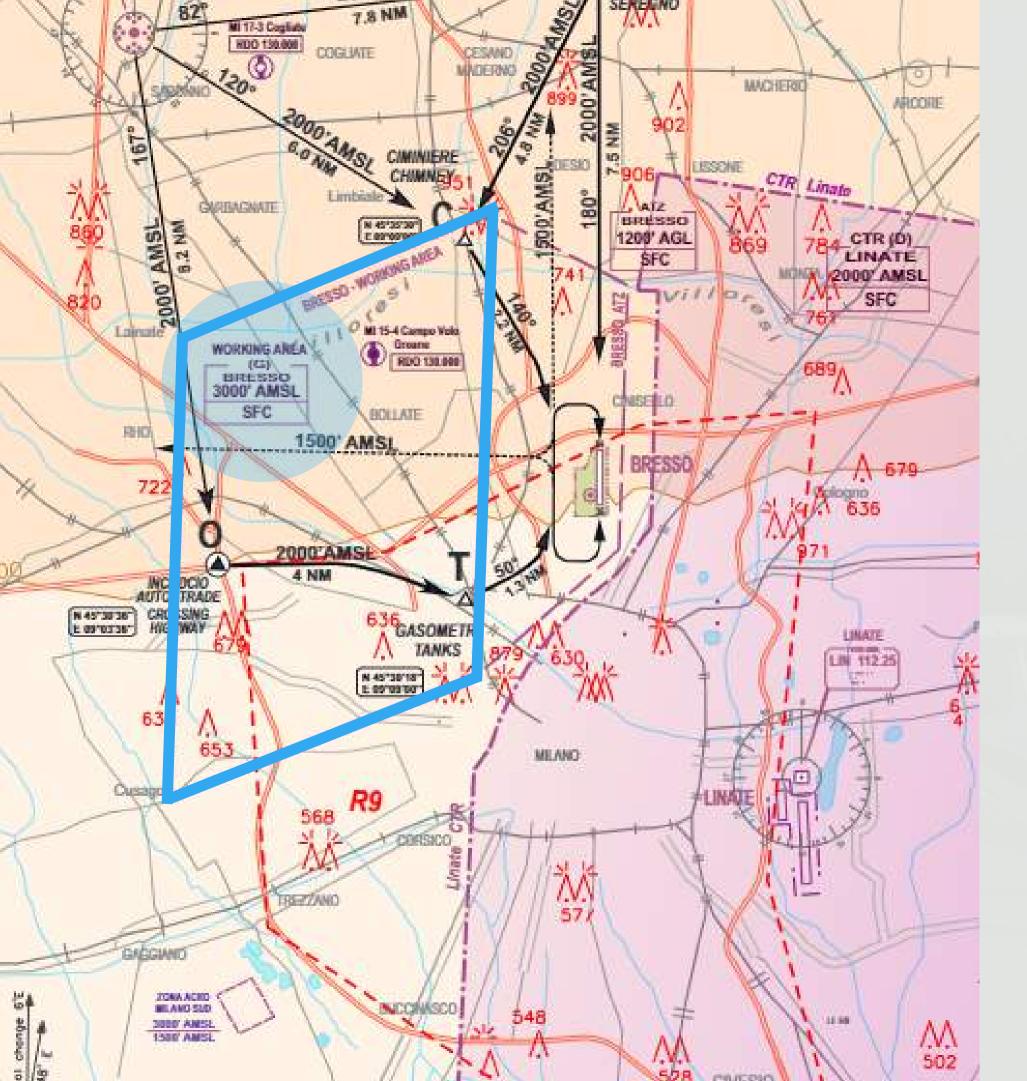

AIRSPACE GENERAL INFORMATION **BRESSO WORKING AREA 3000FT AMSL** SFC

• Intense Training Flight traffic, including solo flights, please keep continuous watch. Bresso Working Area is restricted to IT.ATO.0007 – Aero Club Milano flights



Opening Hours:

08:00LT – ephemeris: Weekends 09:00LT – ephemeris: Weekdays

+39 02 66 50 8616 biga@aeroclubmilano.it

Opening Hours:

09:00-13:00 / 14:00-18:00 (LT): Summer Time 09:00-13:00 / 14:00-17:00 (LT): Winter Time +39 02 61 01 625 segreteria@aeroclubmilano.it

RUNWAY SPECIFICATIONS

RWY	C	QFU	RWY DIMENSION		STRENGHT:	CLEARWAY DIMENSION		STRIP DIMENSION		LIGHTS
18	179°		1080m x 30m	1080m x 5T SIWL 30m ASPHALT		60m x 150m		1200m x 150m		NOT AVAILABLE
36	359°		1080m x 30m		5T SIWL ASPHALT	60m x 150m		1200m x 150m		NOT AVAILABLE
The second state			E MAR BAR		A Contraction of the second se	Alex	a state below	AND THE	Carlos and	and the second
RWY TO		RA (M)	ASDA (M)			TODA (M)		LDA (M)		
18 [·]		080 1080		1080		1140			1080	
36 1		1080		1080	114		0		1080	

TEM

AIRBORNE AND GROUND OPERATIONS

- Considerable light aircraft operating withing aerodrome circuit and working area;
- Extensive use of Italian Language, although ENG is available
- Bresso Radio IS NOT AN ATC UNIT! Radio Operators give INFORMATION and ADVICE about traffic in LIMB ATZ and BRESSO WORKING AREA as far as possible, as well as RWY in use and surface wind. DO NOT EXPECT any authorization.
- Flight operations are under PIC's own responsibility."
- Milano City Restricted Area (R9) next to airport
- Apron rapidly becomes congested during summer time.

WEATHER

- Poor visibility during winter season, characteristic of Po Valley;
- Expect turbolence with "Föhn" and northern winds.



OPERATONAL RULES



PREFERENTIAL RUNWAY: 18



RADIO FREQUENCY: 122.005 MHZ

- Callisign: "Bresso Radio" is assigned for GA traffic information, no traffic separation provided.
- At first communication with Bresso Radio please report your callsign followed by "helicopter" or "high permormance aeroplane" as applicable







OPERATONAL RULES

IF YOU ARE AN HELICOPTER:

- traffic is on Final or T/O leg.
- Please follow Radio Operator's advice.
- reporting points.



IF YOU ARE AN HPA:

- in the pattern to leave it and give way"
- reporting points.


• Keep clear of active RWY - Approach airfield parallel to RWY in use on the **EAST side** and expect to cross RWY as soon as no

• Contact Bresso Radio at least 5 minutes before entry VFR

• Expect delay and holding on "N" Point to allow any other traffic

• "Please advise AIS of your final approach speed".

• Contact Bresso Radio at least 5 minutes before entry VFR

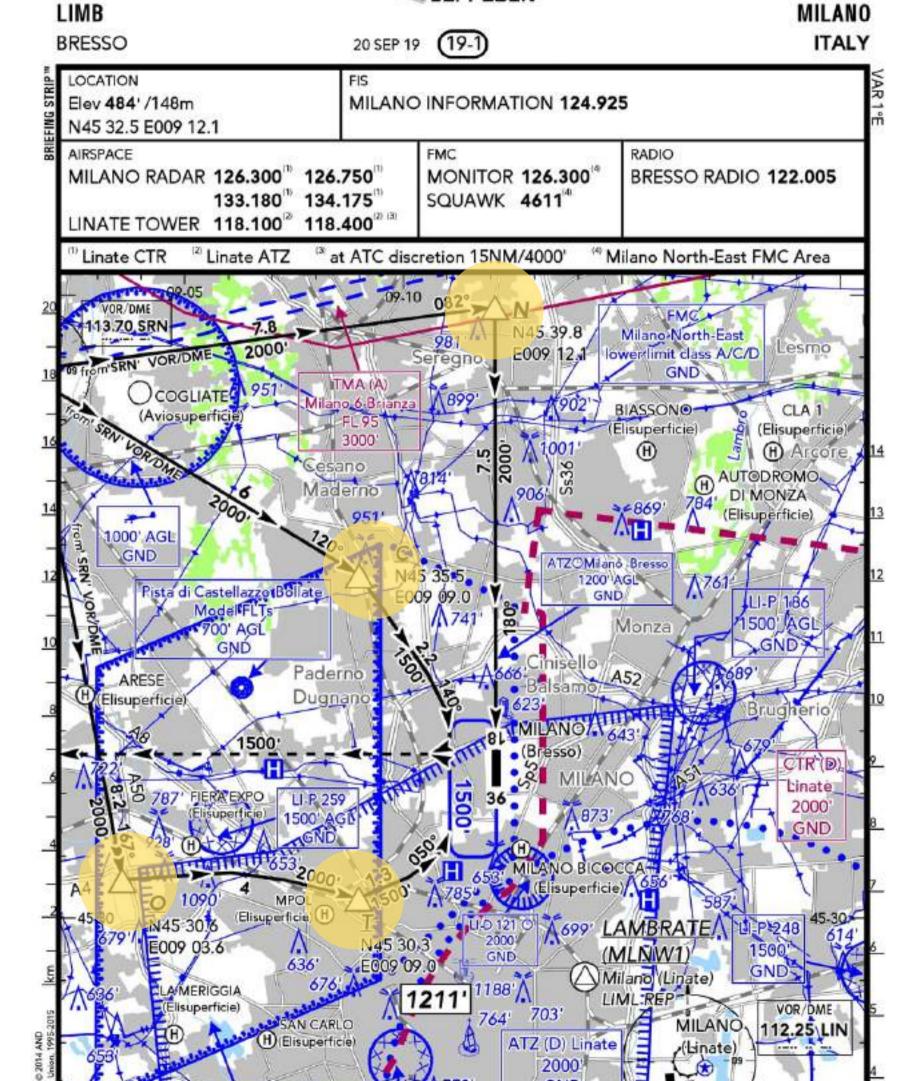

There are 4 reporting points used for the entry and exit routes. They are:

- POINT "N" • POINT "C" • **POINT** "O"
- **POINT "T**"

VFR REPORTING POINTS

VALIDITY OF APPROACH CHART SHALL ALWAYS BE VERIFIED

CTR (D) LINATE

"N" REPORTING POINT SEREGNO

TRK 180° 7.5NM LIMB RWY 18



TRK 140° 2.2NM OVERHEAD **FIELD 2000'**

"C" REPORTING POINT CHIMNEY / VAREDO

"O" REPORTING POINT MOTORWAY EXIT A4 (MI-VE)

TRK 100° 4NM INBOUND "T"

"T" REPORTING POINT TANKS

TRK 050° 1.3NM INBOUND LIMB

LIMB

R9 MILANO CITY RESTRICTED AREA


IN FIRE

RWY 18 IN USE "O" ARRIVAL RECCOMENDED PROCEDURES

REPORT "O" POINT 2000 FT AMSL

PROCEED WITH COURSE 100° INBOUND "T" POINT AND REPORT WHEN REACHING

WITH TRAFFIC IN SIGHT: PROCEED WITH COURSE 050° DESCENDING TO 1500 FT AMSL TO ENTER RIGHT DOWNWIND RWY 18.

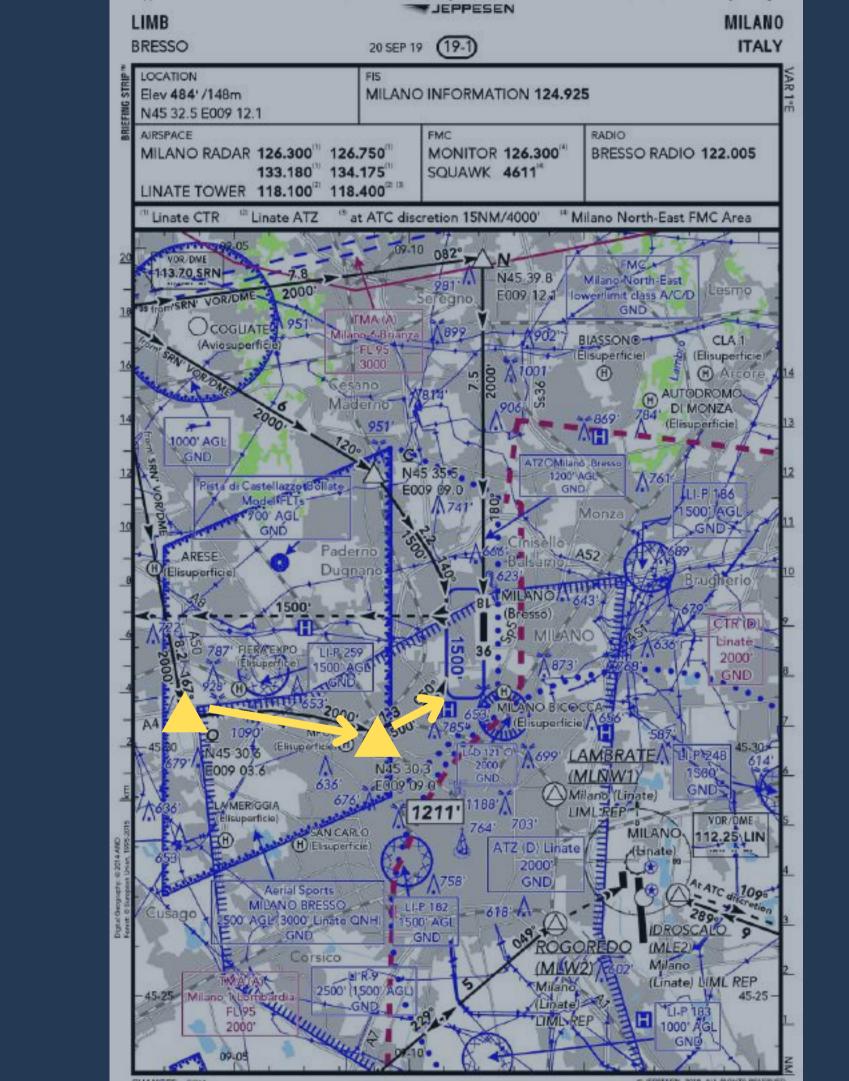


RWY 18 IN USE "N" ARRIVAL RECCOMENDED PROCEDURES

REPORT "N" POINT 2000 FT AMSL;

WITH TRAFFIC IN CIRCUIT: CONTINUE 2000 FT AMSL AND REPORT OVERHEAD THE FIELD TO JOIN RH DOWNIND 18


WITH NO TRAFFIC IN CIRCUIT: PROCEED WITH COURSE 180° AND REPORT "EAST ABEAM C POINT" FOR FURTHER TFC INFO

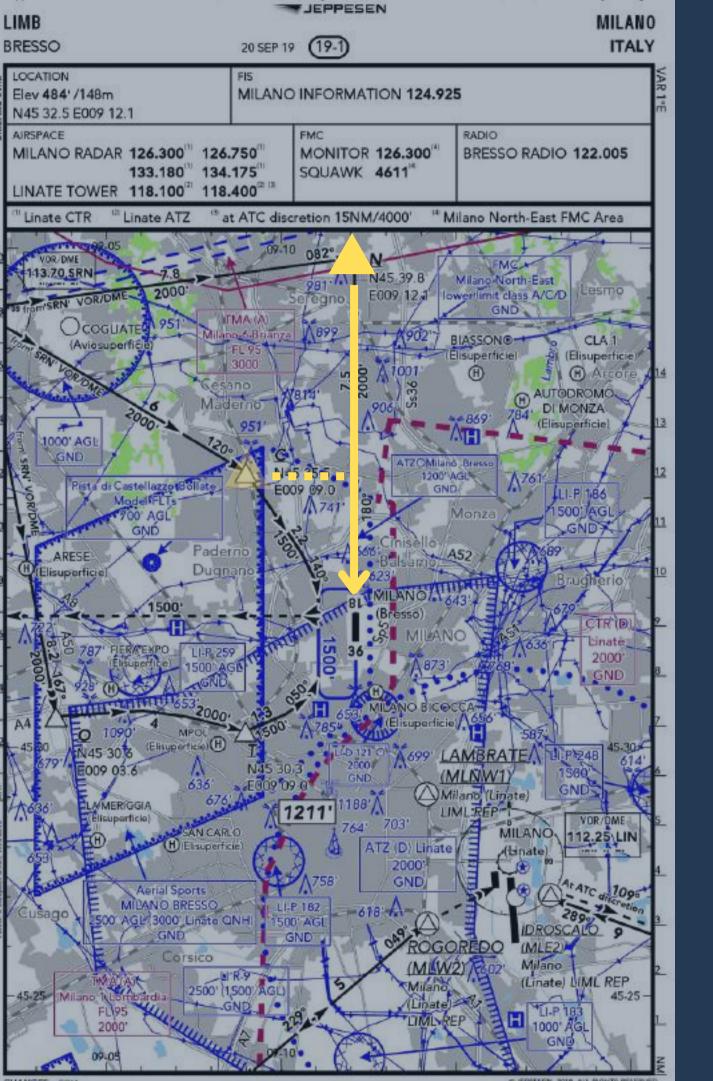

RWY 36 IN USE "C" ARRIVAL RECCOMENDED PROCEDURES

REPORT "C" POINT 2000 FT AMSL

WITH TRAFFIC INSIGHT: PROCEED COURSE 140°, DESCEND AT 1500 FT AMSL TO ENTER LEFT DOWNWIND 36.

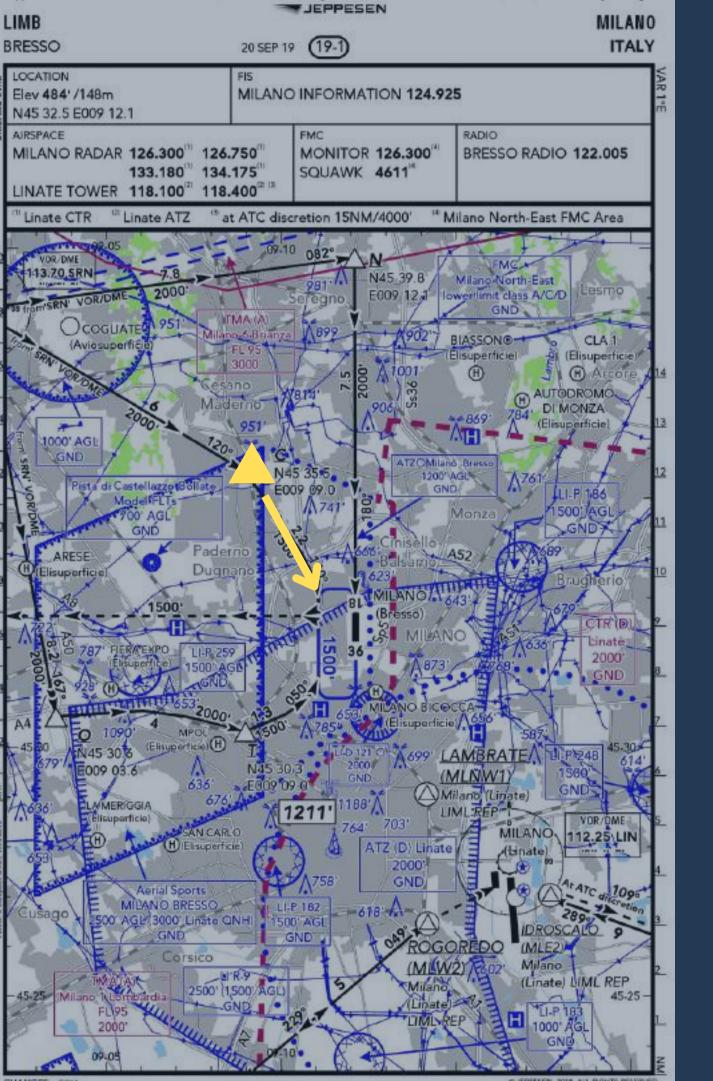


RWY 36 IN USE "O" ARRIVAL RECOMENDED PROCEDURES

REPORT "O" POINT 2000 FT AMSL

- PROCEED WITH COURSE 100° INBOUND "T" POINT AND REPORT WHEN REACHING
- MAINTAINT 2000 FT AMSL AND PROCEED OVERHEAD THE FIELD

WITH TRAFFIC INSIGHT: YOU MAY NOW DESCEND AT 1500 FT AMSL TO ENTER LEFT DOWNWIND 36.

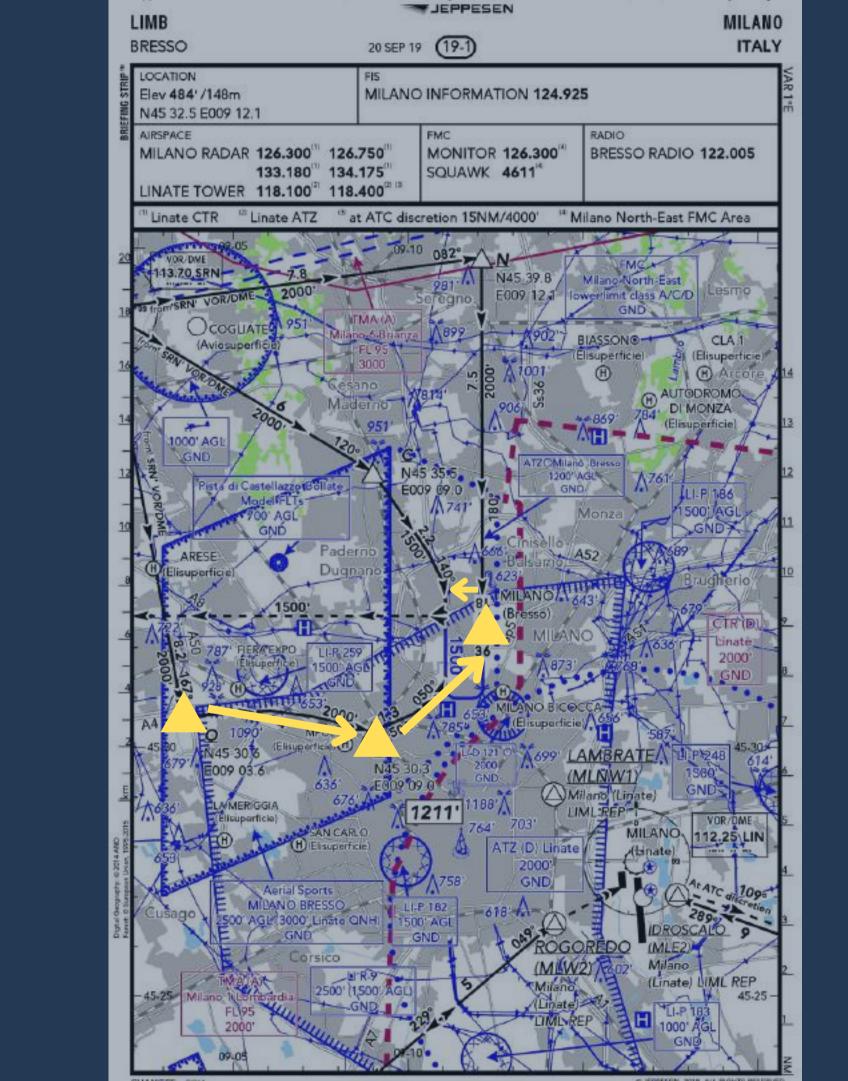

TRAFFIC PATTERN

TRAFFIC CIRCUIT PATTER IS:

• WEST of field for AEROPLANES


TEM


LINATE CONTROLLED AREA


 Pay attention to Linate Controlled Area – CTR(D) – East of Bresso Airport.

TRAFFIC PATTERN IS 1500 FT AMSL

2000 FT AMSL OVERHEAD THE FIELD

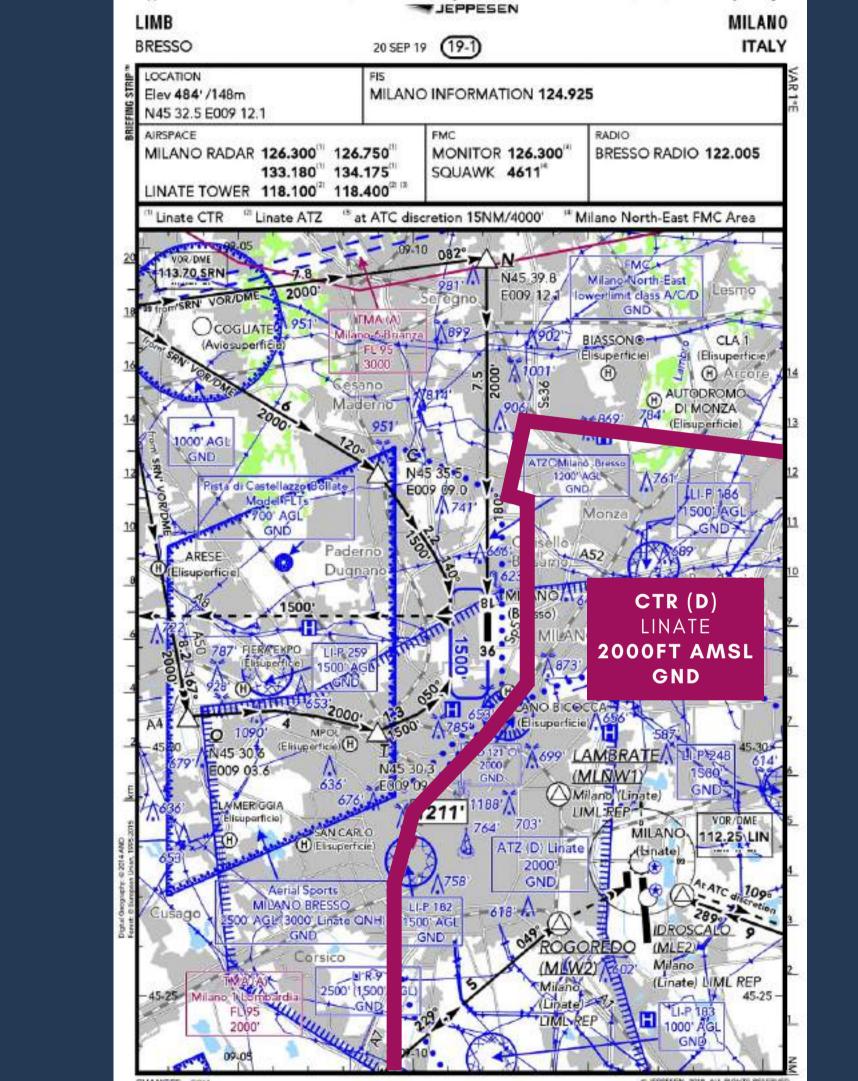

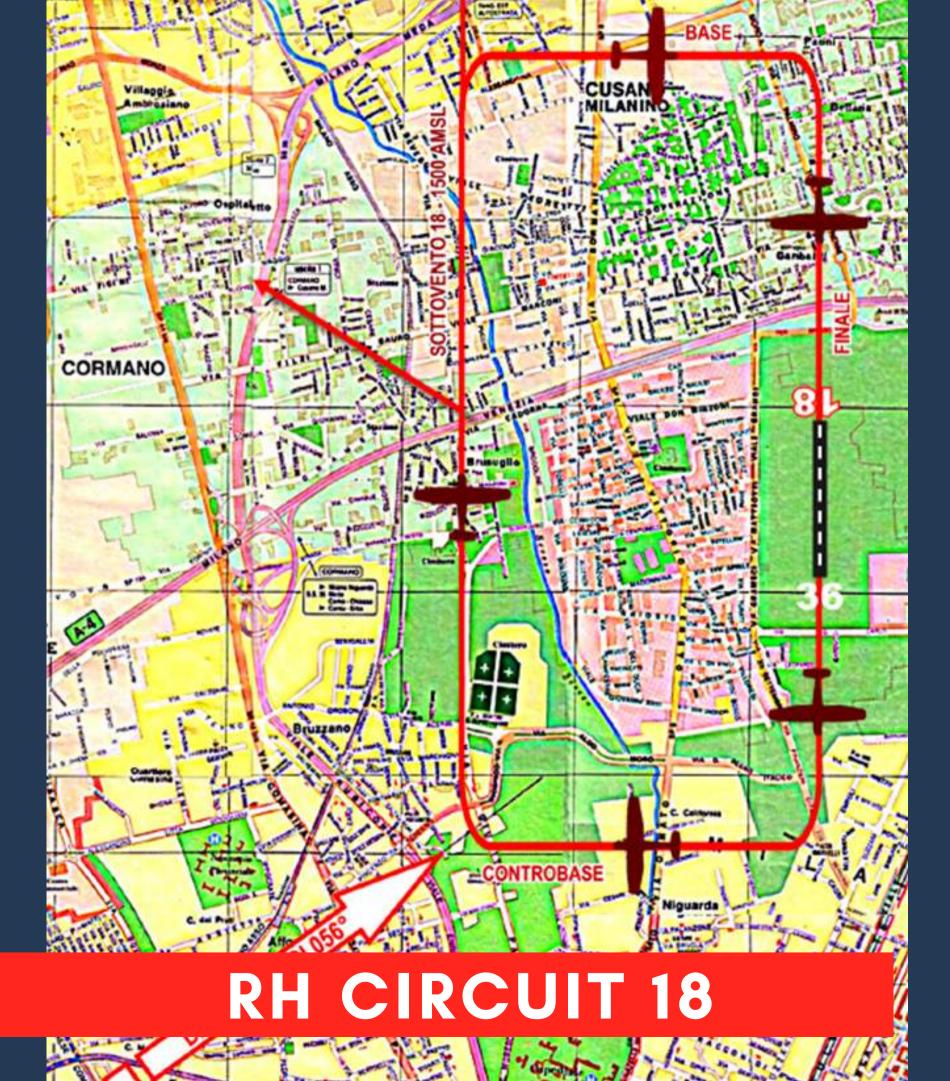

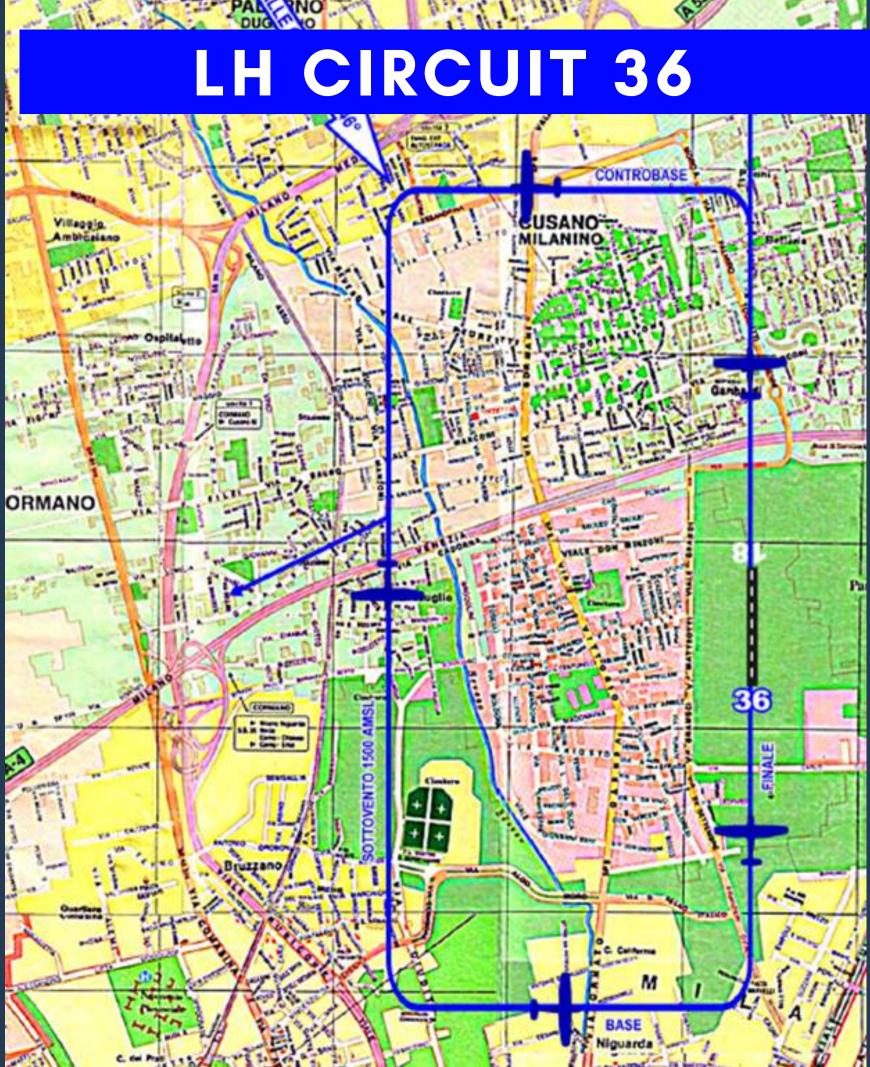

REMINDER

REMEMBER THAT BRESSO IS AN UNCONTROLLED AERODROME, THEREFORE IS YOUR RESPONSABILITY TO CLOSE THE FLIGHT PLAN ONCE ON THE GROUND!

> **ARO LINATE:** (+39) 02 71 02 00 19





DEPARTURE PROCEDURES RECCOMENDED PROCEDURES


WHETHER IS RWY 18 OR 36 IN USE, MAINTAIN 1500 FT AMSL, GROUND CONTACT AND REPORT "C", "O", "N" POINTS BEFORE CONTACTING MILAN INFORMATION (124.925)

• When leaving inbound "N" please maintain WEST side of Long Final Sector to provide traffic separation.

TEM

AIRBORNE OPERATIONS

• Considerable light aircraft operating withing aerodrome circuit and working area: pay attention!

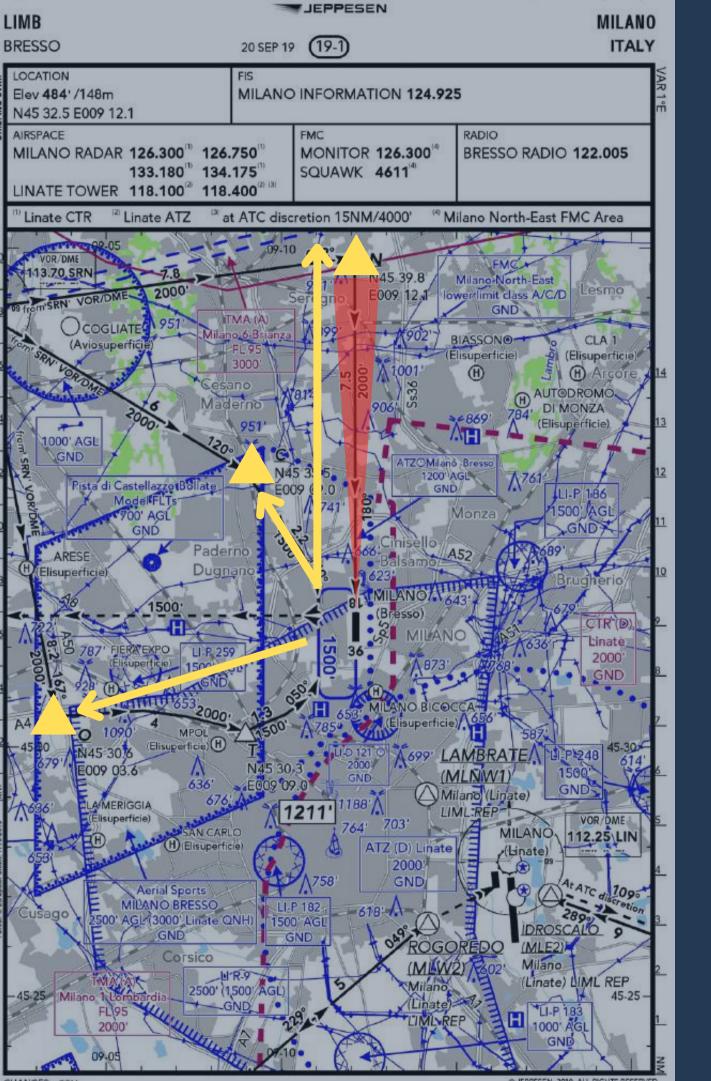

DEPARTURE PROCEDURES INTO IFR PICK-UP


MAXIMUM ALTITUDE IS 2000FT, UNLESS CLEARED BY MILAN RADAR

 Please follow route and profile as a standard VFR
Departure and expect to change with Milan Information (124.925).

YOU WILL THEN OPEN THE FLIGHT PLAN DIRECTLY WITH MILAN INFORMATION

• Before departure set XPDR Code **4611**, Mode "A" Active

- 8	L IMB Bresso
BRIEFING STRIP ¹⁰	LOCATION Elev 484' /148m N45 32.5 E009 1
BRIE	AIRSPACE MILANO RADA
	LINATE TOWE
	¹⁰ Linate CTR
20	VOR/DME

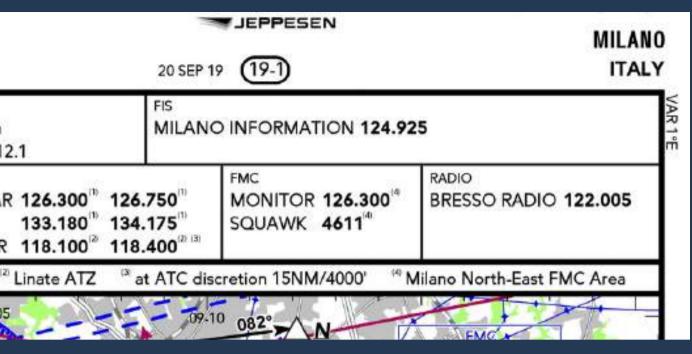

MILAN INFORMATION: 124.925

MILAN RADAR: 126.300 126.750

LINATE TOWER 118.100

ARO LINATE: (+39) 02 71 02 00 19



5.

IN

THE REAL PROPERTY.

AEROCLUB RECEPTION

RERRERERE

LAND SIDE FACILITIES

APRON GATE

D

-

TOWER

+12

the second

Jan In In In In

RESTAURANI AND WC

AEROCLUB RECEPTION

HUNGLEN

10000000000

LAND SIDE FACILITIES

100 m

ENTRANCE

EMERGENCY GATES (*)

GRASS PARKING

HELIPAD

TOWER





(*): EMERGENCY GATES: PARKING IS FORBIDDEN



AIR SIDE FACILITIES

MAINTENANCE HANGAR

EMERGENCY GATE: PARKING IS FORBIDDEN

Here

a



FUEL STATION PARKING A

 \sim

BE CAREFUL OF MAINTENANCE HANGAR

A CHINE AND A CHIN

GROUND OPERATIONS

TAXIING FOR RUNWAY 18


- From your position taxi via taxyway M (paved) to holding point M .
- When ready for departure: ask for a backtrack so you will be able to line up for take-off.


TAXIING FOR RUNWAY 36

- From your position taxi via taxyway S (paved) to holding point 36.
- When ready for departre: ask to line up for take-off.

NOTICE:

Taxiways "N" and "P" (both on grass) are CLOSED

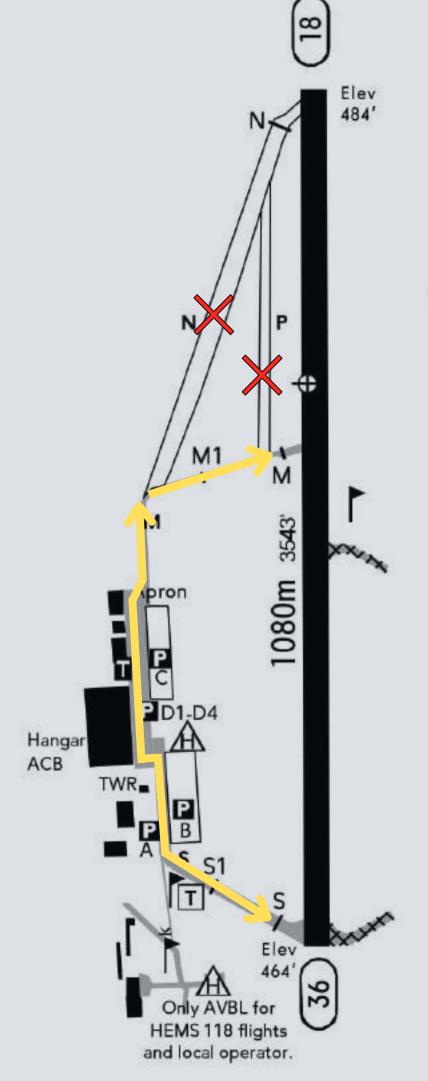


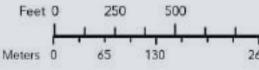

NOTE:

ENGINE RUN-UP CHECKS


As a safety measure, engine run-up checks shall be carried out at the holding points, at a safe distance from the stop bars and any other aircraft.

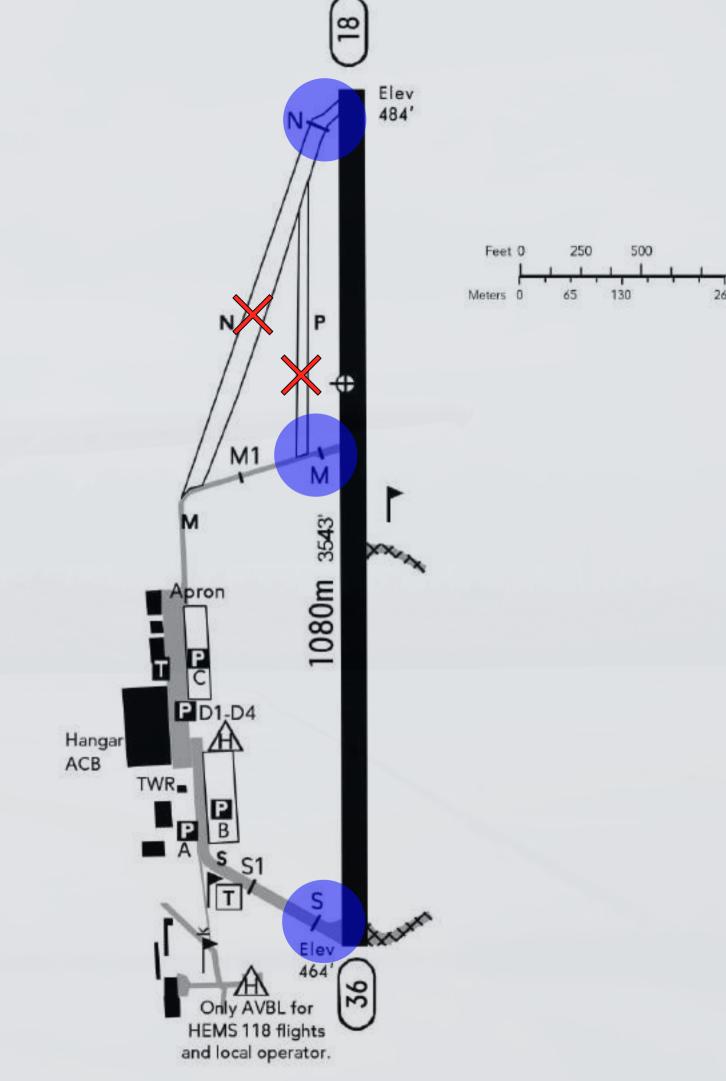





RUN UP AREA "M" POINT

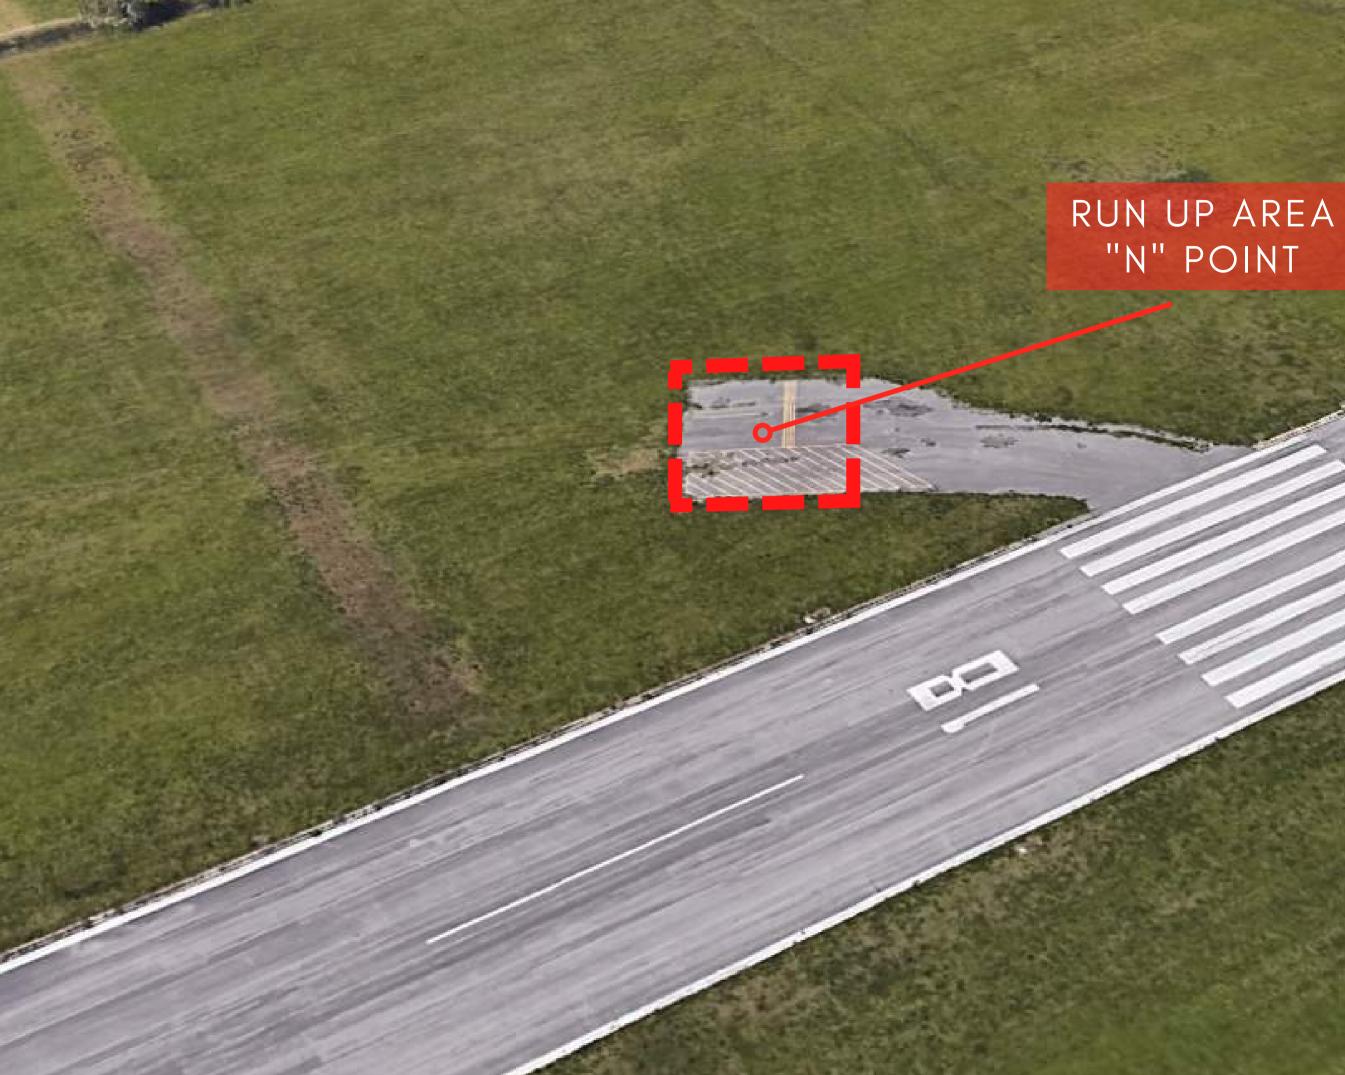

NOTICE TO HELICOPTERS

STAY AWAY FROM HEMS FATO

Pay attention to the Helicopter Landing Area **EAST SIDE** of Runway 18/36, available for HEMS 118 Service Only. Heavy Helicopters on Allarm Duty, Wake Turbulence may be encountered.

1





LIMB VFR CHARTS APPROACH CHART GROUND MOVEMENT CHART

DESPICIED CHART MAY BE OUTDATED

USE ONLY FOR TRAINING PURPOSING AND REFERENCES ONLY

PNR PRIOR NOTIFICATION REQUIRED

AVIATION SAFETY

SAFETY REPORTS

GROUND AND FLIGHT REPORTs

If any needed, fill and send it to: ato@aeroclubmilano.it

USEFUL LINKS CLICK ON PICTURES TO BE LINKED

TO RELEVANT SERVICES

PRESENT WEATHER WEATHER STATION







Give us your Feedback! Help us to Improve!





Street suffigures


Minor does your feedback concern?*

A function street or boson (series your, 50%s,)

A survey facing concerned or boson (series your, 1)

One.

Evaluation

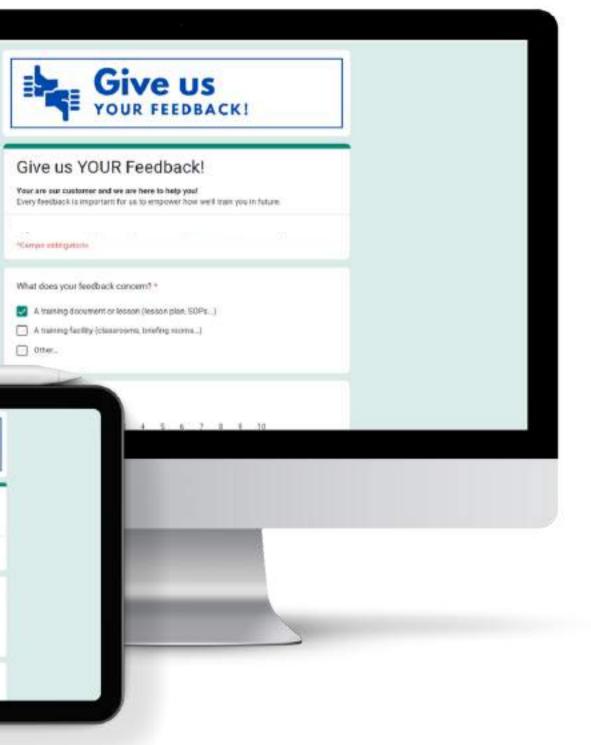

PROJECT © Dolce Samuele