Edition: **2** Revision: **0** Issued: **18.06.2023**

PILOT'S FAMILIARIZATION GUIDE

.

Written by: Samuele Dolce

INDEX

PART 0 - GENERIC	3
0.1 - OBJECTIVE	3
0.2 – LEGAL DISCLAIMER	3
0.3 – AIRPORT GENERAL INFORMATION	4
0.4 – AERODROME OPERATOR SERVICING HOURS	5
0.5 – RUNWAY SPECIFICATIONS	5
0.6 – PNR – PRIOR NOTIFICATION REQUIRED	6
PART 1 – AERO CLUB MILANO FACILITIES	7
1.1 – LAND SIDE FACILITIES	7
1.2 – AERO CLUB MILANO SECRETARIAT	8
1.3 – AIR-SIDE FACILITIES	9
1.4 - APRON AND PARKING AREA	10
1.5 - AIRCRAFT REFUELING	11
1.5.1 – SAFETY MEASURES	12
PART 2– OPERATIONAL PROCEDURE	13
2.1 – TAXIING	13
2.1.1 - TAXIING FOR RUNWAY 18	13
2.1.2 - TAXIING FOR RUNWAY 36	13
2.2 - RUN-UP CHECK AREAS	14
2.3 - DEPARTURES PROCEDURES	15
2.3.1 – FLIGHT PATH DEPARTURES – RWY 18	15
2.3.2 – FLIGHT PATH DEPARTURES – RWY 36	15
2.4 - ARRIVAL PROCEDURES	16
2.4.1 – FLIGHT PATH ARRIVAL – RWY 18	16
2.4.2 – FLIGHT PATH ARRIVAL – RWY 36	16
2.5 - OPERATIONAL RULES	17
2.5.1 – HELICOPTER RULES	17
2.5.2 – HIGH PERFOTMANCE AEROPLANE RULES	17
2.6 – LOST COMM. PROCEDURE	18
PART 3 - AIRSPACES	19
3.1 – THREATS IDENTIFICATION	19
3.2 – AIRSPACE HAZARDS	20
3.3 – ATZ - AERODROME TRAFFIC ZONE & TRAFFIC PATTERN	21
3.4 – LOCAL TRAINING AREA	22
3.5 – LOCAL TRAINING AREA WAYPOINTS	23
3.6 – MANDATORY VFR REPORTING POINTS	25
3.7 - LIMB – LANDING + FIREFIGHTING FEES	27
USEFUL LINKS	28
FEEDBACK FORM	29

PART 0 - GENERIC

0.1 - OBJECTIVE

The main objective of this guide is to support pilots, flight schools and flight operators in preparing the operations to and from LIMB.

Please remember that the entire content of this publication is property of Aero Club Milano and copyright protected.

I hope that you will find it useful and I wish you all a pleasant reading!

Samuele Dolce

0.2 – LEGAL DISCLAIMER

The use of this guide does not subsitute knowledge of official documentation such as ICAO Regulations, AIP ITALIA and NOTAMs.

All information published are property of Aero Club Milano.

LIMB - Bresso Airport Pilot's Familiarization Guide

Ed. 2 - Rev. 0 | Issue Date: 18.06.2023

0.3 – AIRPORT GENERAL INFORMATION

	404# / 440m AMCI
Airport Elevation:	484ft / 148m AMSL
Airport Coordinates (ARP):	45°32'29''N – 009°12'08''E
ICAO Indicator:	LIMB
Class of Airspace:	Uncontrolled "G" – Only VFR Traffics Allowed
AIS Services:	From 08:00LT to ephemeris (weekend) From 09:00LT to ephemeris (weekdays)
Aerodrome firefighting CAT:	ICAO CAT. 2
Fuel Type Available:	AVGAS 100LL and JET A-1 Note: Refueling alongside by tanker may be subject to delay. Non-wheeled Helicopters refueling by tanker ONLY
Distance from the city center:	4.3 NM (NNE)
City center connection:	 Bus line 708 to "Sesto Rondò - M1" underground station then follow indication to city-center. Bus line 783 to "Bicocca – M5" underground station then follow indication to city-center. Taxi on requested Useful Link: <u>https://moovitapp.com</u>

LIMB - Bresso Airport Pilot's Familiarization Guide

Ed. 2 - Rev. 0 | Issue Date: 18.06.2023

0.4 – AERODROME OPERATOR SERVICING HOURS

	Opening Days/Hours: 7/7
	08:00 (LT) - ephemeris: Weekends
Radio AIS - "Biga"	09:00 (LT) - ephemeris: Weekdays
	+39 02 66 50 8616
	biga@aeroclubmilano.it
	Opening Days/Hours: 7/7
	09:00-13:00 / 14:00-18:00 (LT): Summer Time
Customer Front Desk	09:00-13:00 / 14:00-17:00 (LT): Winter Time
	+39 02 61 01 625
	segreteria@aeroclubmilano.it

0.5 – RUNWAY SPECIFICATIONS

RWY	QFU	RWY DIMENSIONS	STRENGHT	CLEARWAY DIMENSION	STRIP DIMENSION	LIGHTS
18	179°	1080m x 30m	5T SIWL ASPHALT	60m x 150m	1200m x 150m	N/A
36	359°	1080m x 30m	5T SIWL ASPHALT	60m x 150m	1200m x 150m	N/A

RWY	TORA	ASDA	TODA	LDA
18	1080m	1080m	1140m	1080m
36	1080m	1080m	1140m	1080m

0.6 – PNR – PRIOR NOTIFICATION REQUIRED

PRIOR NOTIFICATION REQUIRED IS MANDATORY

All flights to/from LIMB shall be notified to Aero Club Milano by means of a specific form available at <u>https://services.aeroclubmilano.it/v2/pnr</u>.

The Prior Notification Required is a Police disposition, therefore non-complying crew and passengers may be subject to further police investigation.

Flight notification must be forwarded:

At least 12 hours before EOBT/ETA for flights to/from EU member states not adhering to the Schengen area
At least 12 hours before EOBT/ETA for flights to/from non-UE states member of the Schengen area;
At least 3 hours before EOBT/ETA for all other flights.

Traffic not affected:

- State Flights
- HEMS
- Training flights performed by members of both flying associations and concessionaire companies, based at LIMB, with aircraft of their own or aircraft usually based at LIMB.



PART 1 – AERO CLUB MILANO FACILITIES

1.1 – LAND SIDE FACILITIES

LIMB - Bresso Airport is located in Viale Antonio Gramsci, 1 – 20091, Bresso, Milan, Italy and it is open 7/7 from 09:00(LT) AM until ephemeris.

Entrance to LIMB Bresso airport airfield is possible through a green fence on Viale Antonio Gramsci 1 in Bresso City.

Cars and motorcycles **shall be parked** at parking slots located south of the hangars. Cars and motorcycles **shall not be parked** on the west road gate (*see picture below*) and shall remain always clear of obstacle, as main emergency access for rescue vehicles in case of incidents.



1.2 – AERO CLUB MILANO SECRETARIAT

The Aero Club Milano secretariat and operative area is accessible through the door located on the west road gate (see *picture below*).



Aero Club Milano operative site is consists of a main operational building, located on the facing west side area of the main hangar and 2 hangars (Main Hangar and Maintenance hangar).

Access to maintenance hangar is restricted to personnel only.

Pedestrian entrance to the secretariat and operational site is granted through the doors facing and the west road gate located behind west side of the main hangars; all doors are operated through badges issued by Aero Club Milano ground staff personnel.



1.3 – AIR-SIDE FACILITIES

Aero Club Milano Air Side facilities are as follows:

- Operational Main Building
- North and South Hangars
- Biga (Tower) Detached area with an additional briefing room

Access to training facilities is limited and subject with badges.

For safety reasons Yellow high visibility vest must be wear always on the main apron.




1.4 - APRON AND PARKING AREA

Movement area of LIMB "Bresso Airport" is characterized of heavy traffic of people, helicopters and aircrafts.

Horizontal guidance is provided but please be aware that taxiways guidace does not provide any clearance to operate safely the aicraft on the maneouvring area, therefore massive precautions shall be taken while operating in the apron, on the taxiways and on parking slots. To minimise any reasonable risk of hazard proper beacon or strobo/navigation lights shall be activated before engine running.

Taxi light (if installed) may be used in addition while taxiing the airplane.

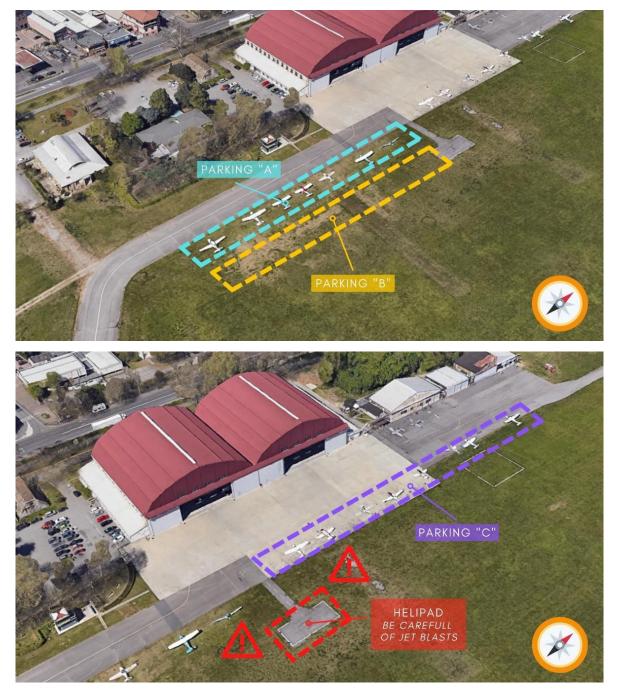

1.5 - AIRCRAFT REFUELING

When operating in Bresso Airport, all aircrafts shall be refueled at the refueling point for **AVGAS 100LL** and **JET-A1** (*see picture below*).

Refueling point is located between the main hangar and the maintenance hangar (see picture below).



1.5.1 – SAFETY MEASURES

For safety reasons, operational precautions while operating within the fuel pump station shall be accomplished:

- 1. Park the aircraft following the appropriate taxiway path, unless previously coordinated with ground staff personnel or radio operator.
- 2. Do not park the aircraft facing "North", emergency gate shall always remain free for emergency services (see picture below).
- 3. Exercise extreme caution when taxiing in the vicinity of the refueling point to prevent the risk of wing or tail collision with maintenance hangar, other aircrafts, or ground staff personnel.
- 4. While leaving the aircraft please pay particular attention to have set:
 - a) MAGNETOS: OFF (extract the key and put it "on standby")
 - b) BATTERY AND ALTERNATOR: OFF
 - c) PARKING BRAKE: RELEASED WHILE LEAVING THE AIRCRAFT.



PART 2- OPERATIONAL PROCEDURE

2.1 – TAXIING

2.1.1 - TAXIING FOR RUNWAY 18


- From your position taxi via taxyway M (paved) to holding point M.
- When ready for deparure: ask for a backtrack so you will be able to line up for take-off.

2.1.2 - TAXIING FOR RUNWAY 36

- From your position taxi via taxyway S (paved) to holding point 36.
- When ready for deparure: ask to line up for take-off.




Taxiways "N" and "P" (both on grass) are CLOSED

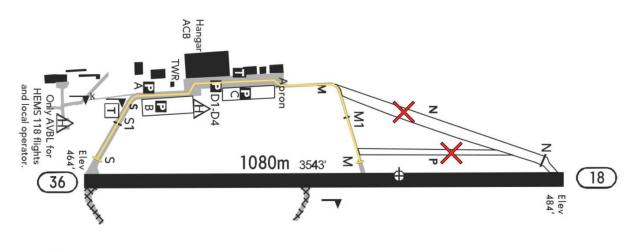



2.2 - RUN-UP CHECK AREAS

As a safety measure, engine run-up checks shall be carried out at the holding points, at a safe distance from the stop bars and any other aircraft. These are the designed safety points for the run-up:

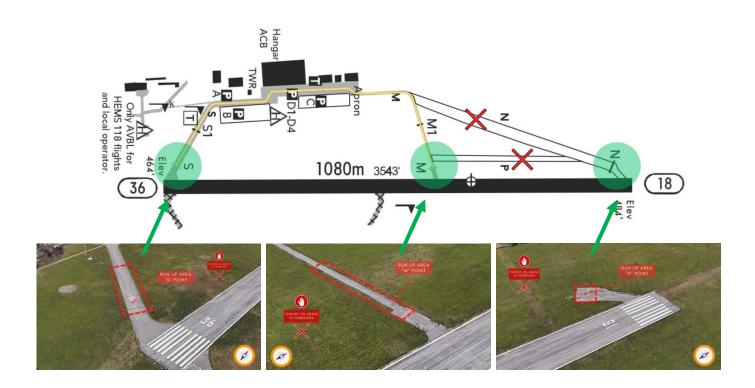

2.3 - DEPARTURES PROCEDURES 2.3.1 – FLIGHT PATH DEPARTURES – RWY 18



Whatever RWY is in use (18 or 36):

• Traffic shall maintain 1500ft AMSL until leaving ATZ or "Bresso Working Area".




2.3.2 – FLIGHT PATH DEPARTURES – RWY 36



Whatever RWY is in use (18 or 36):

• Traffic shall maintain 1500ft AMSL until leaving ATZ or "Bresso Working Area".

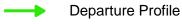


2.4 - ARRIVAL PROCEDURES 2.4.1 – FLIGHT PATH ARRIVAL – RWY 18



When approaching from North Sectors (NOVEMBER Or CHARLIE Points):

- Proceed OVERHEAD the field at 2000ft AMSL and then join RH downwind 18 when traffic is in sight;
- Otherwise, maintain 2000ft AMSL performing orbits according to circuit direction and then join the pattern as soon as clear of any other traffic.
- When approaching from OSCAR Point:
 - Proceed inbound TANGO maintaining 2000ft AMSL.
 - <u>As Soon As The Traffic In The</u> <u>Pattern Is In Sight</u> (Especially Traffic Climbing On Crosswind-Leg), leave TANGO descending to 1500ft AMSL joining RH downwind 18.

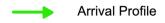



2.4.2 – FLIGHT PATH ARRIVAL – RWY 36

- When approaching from North sectors (NOVEMBER or CHARLIE points):
 - Proceed inbound CHARLIE point maintaining 2000 ft AMSL. As soon as traffic in the pattern is in sight (especially traffic climbing on crosswind-leg), leave CHARLIE descending to 1500 ft AMSL joining LEFT downwind 36.
- When approaching from OSCAR point:
 - Proceed inbound TANGO maintaining 2000 ft AMSL. Leaving TANGO, proceed inbound overhead 2000 ft AMSL and join traffic pattern as essential traffic is in sight;
 - Otherwise, maintain 2000 ft performing orbits according to circuit direction (WEST of RWY) to join the pattern as soon as clear of any other traffic

Arrival Profile

2.5 - OPERATIONAL RULES

2.5.1 – HELICOPTER RULES

- Keep clear of active RWY: Approach airfield parallel to RWY in use on the EAST side and expect to cross RWY as soon as no traffic is on Final or T/O leg.
- Please follow Radio Operator's advice.
- Contact Bresso Radio at least 5 minutes before entry VFR reporting points.



2.5.2 – HIGH PERFOTMANCE AEROPLANE RULES

- Expect delay and holding on "N" Point to allow any other traffic in the pattern to leave it and give way"
- "Please advise AIS of your final approach speed".
- Contact Bresso Radio at least 5 minutes before entry VFR reporting points.


2.6 – LOST COMM. PROCEDURE

IF POSITIVE COMMUNICATION IS ESTABLISHED WITH ATC:

- A. The pilot should advise that radio communications on the assigned frequency has been lost giving the aircraft's last position and altitude.
- B. There is no priority on which action should be attempted first.

IF YOU ARE NOT ABLE TO REESTABLISH COMMUNICATION WITH ATC:

- A. Set your transponder code to 7600 for lost communication procedure.
- B. Continue to make radio calls in the blind transmission method.
- C. In the vicinity of the aerodrome:
 - a. Report overhead the field (1700ft AMSL);
 - b. Check the appropriate windsock and "T" position to verify the current runway in use (see picture below);
 - c. Rock your wings;
 - d. With all traffic in sight: descent to downwind currently in use (at 1500ft AMSL) then perform a full stop landing.

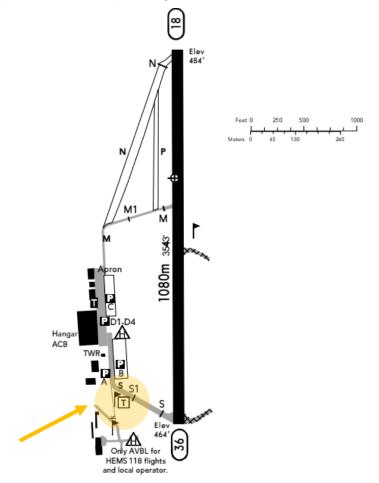

PART 3 - AIRSPACES

3.1 – THREATS IDENTIFICATION

Please refer to the "Threat Matrix" that identifies the major threats identification and helps pilots to highlight the potential examples of risk.



	THREATS AND HAZARDS IDENTIFICATION
AIRBORNE AND GROUND OPS	 Considerable light aircraft operating withing aerodrome circuit and working area; Extensive use of Italian Language, although ENG is available. Bresso Radio is not an ATC unit. Radio Operators give INFORMATION and ADVICE about traffic in LIMB ATZ and BRESSO WORKING AREA as far as possible, as well as RWY in use and surface wind. DO NOT EXPECT any authorization. Flight Operations are under PIC's own responsibility." Milano City Restricted Area (R9) next to airport Apron rapidly becomes congested during summer time.
WEATHER	 Poor visibility during winter season, characteristic of Po Valley; Expect turbolence with "Föhn" and northern winds

3.2 – AIRSPACE HAZARDS

R9


Restricted


Milan


Area

Normal Operations are forbidden over Milan City Area according to R9 restrictions

To avoid R9 please stay outside principal highway which forms the boundary of the restricted area

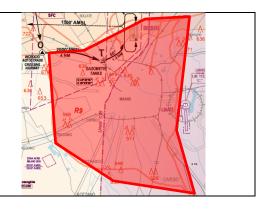

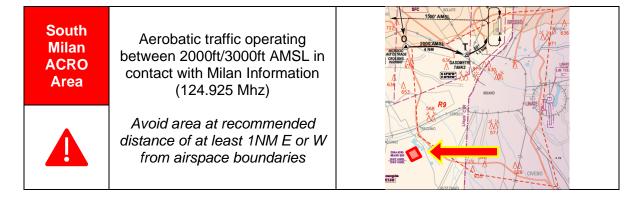

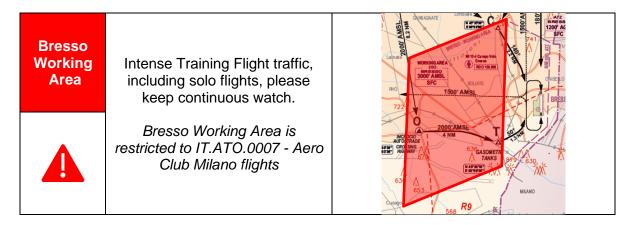

3.3 – ATZ - AERODROME TRAFFIC ZONE & TRAFFIC PATTERN

- Traffic pattern is WEST of the RWY.
- Aircraft in the traffic pattern have priority over any arriving traffic.
- Aircraft holding overhead the field (at 2000 ft AMSL) have priority over any traffic approaching from CHARLIE and TANGO reporting points.
- Preferential RWY: 18
- Radio frequency 122.005 MHz (Bresso Radio) is assigned for General Aviation traffic information.
- Aircraft operating inside "Bresso Working Area" shall inform Bresso Radio 122.005 Mhz about their presence and maintain listening watch on Milano FIC (Milano Information 124.925 Mhz).
- Helicopter training activity shall be performed EAST of RWY within LIMB ATZ limits.


Milano Bresso ATZ - Lateral limits: line joining the points

	•		
1) 45°36'00"N 09°09'30"E		4) 4	5°29'0
2) 45°35'00"N 09°12'30"E		5) 4	5°36'0

3) 45°31'00"N 09°12'30"E

4) 45°29'00"N 09°09'30"E 5) 45°36'00"N 09°09'30"E


Vertical limits: 1200 FT AGL (1700 AMSL QNH of Linate)

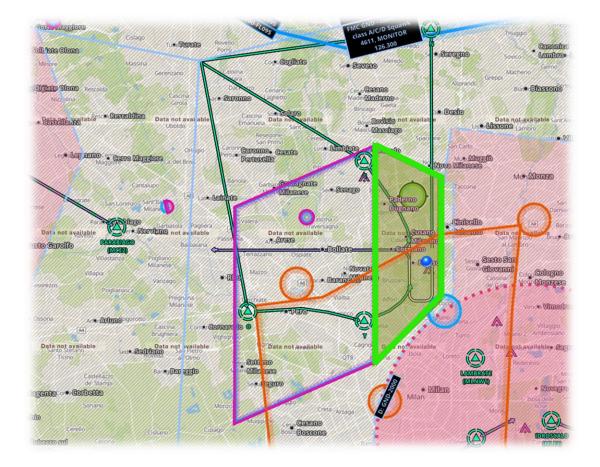

3.4 – LOCAL TRAINING AREA


In an attempt to improve collision avoidance in the flight training environment, the appropriate "**Bresso Working Area**" was created. Local Working Area should be used for local flight training operations.

This area can be used 7 days a week and it's extend from GND' to 2000' QNH

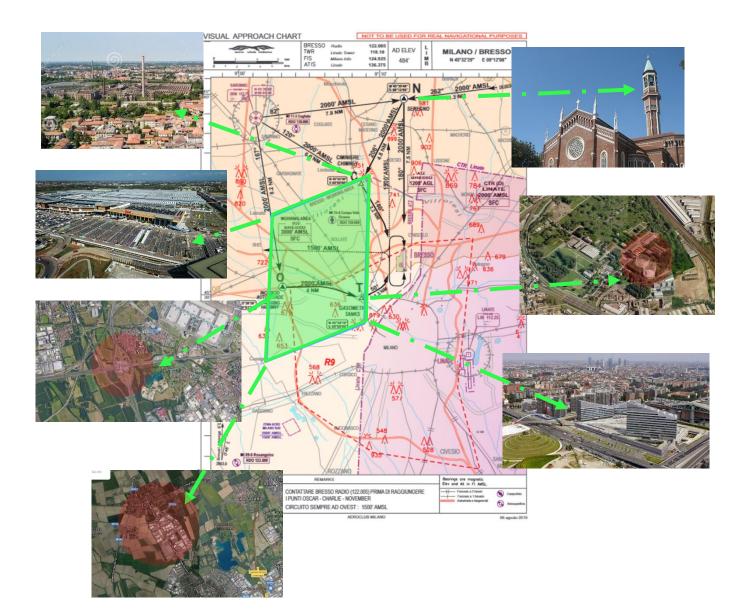


3.5 – LOCAL TRAINING AREA WAYPOINTS

Bresso working area is defined between following waypoints:

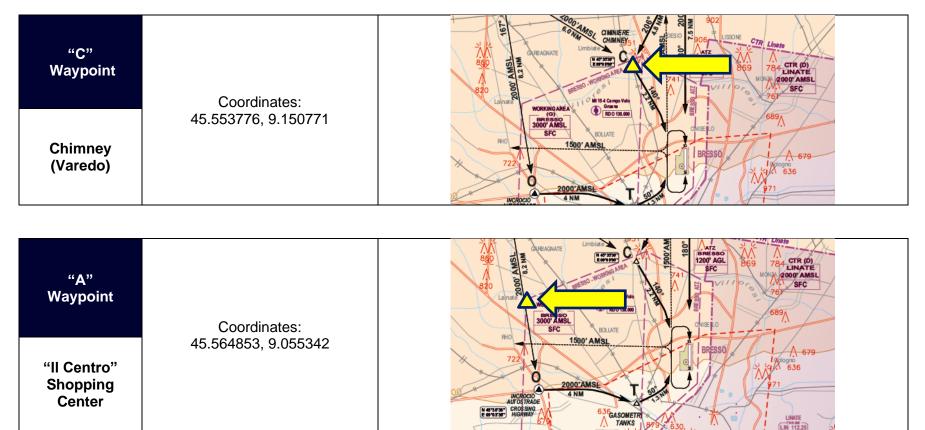

LIMB - Bresso Airport Pilot's Familiarization Guide

Ed. 2 – Rev. 0 | Issue Date: 18.06.2023

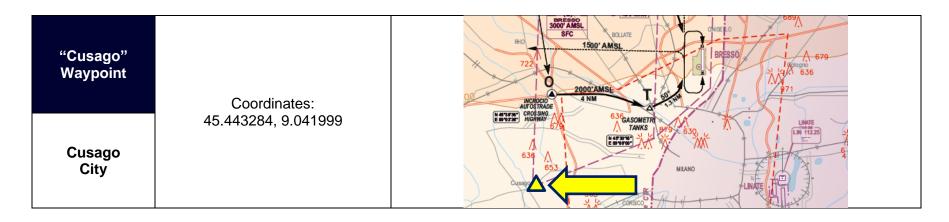

"Portello" Waypoint	Coordinates:	BRESSIC BRESSIC <t< th=""></t<>
Portello (Milan)	45.485653, 9.145375	636 A 1 653 636 A

LIMB - Bresso Airport Pilot's Familiarization Guide Ed. 2 – Rev. 0 | Issue Date: 18.06.2023

3.6 – MANDATORY VFR REPORTING POINTS

"C" Waypoint	Coordinates: 45.553776, 9.150771	CHENKER CHE
Chimney (Varedo)	Additional Information: TRK: 140° 2.2NM from LIMB	PRESSO 722 WORKOW AMEA BRESSO 722 WORKOW AMEA BRESSO 722 BRESSO 722 BRESSO 722 BRESSO 722 BRESSO 722 BRESSO 722 BRESSO 722 BRESSO 722 BRESSO 722 BRESSO 722 BRESSO 722 BRESSO 722 BRESSO 722 BRESSO 723 BRESSO 723 BRESSO 723 BRESSO 721 721 721 721 721 721 721 721

"O" Reporting Point	Coordinates: 45.512325, 9.061968	
Motorway Exit A4 (TO-MI-VE)	Additional Information: TRK: 100° 4NM inbound "T" Reporting Point	1500' AMSL 722 722 1600' AMSL 1500' AMSL 1600' AM

LIMB - Bresso Airport Pilot's Familiarization Guide

Ed. 2 - Rev. 0 | Issue Date: 18.06.2023

"N" Reporting Point	Coordinates: 45.654045, 9.194526	SAROMO SAROMO
Seregno Tower Bell	Additional Information: TRK: 180° 7.5NM from LIMB	BEC SOLO

"T" Reporting Point	Coordinates: 45.504032, 9.154104	850 0012 Imministic 200" AGL 869 78.4. CTR (D) 820 820 869 78.4. CTR (D) 200" AMSL 820 869 78.4. CTR (D) 58.0 820 869 78.4. CTR (D) 58.0 820 86.9 78.4. CTR (D) 58.0 80.0 86.9 78.4. CTR (D) 58.0 80.0 86.9 68.9 76.7 80.0 86.9 68.9 68.9 80.0 86.0 68.9 68.9 80.
Bovisa Tanks	Additional Information: TRK: 050° 1.3NM from LIMB	722 0 2000'AMSE T 55 0 0 1 1 1 1 1 1 1 1 1 1 1 1 1

LIMB - Bresso Airport Pilot's Familiarization Guide

Ed. 2 - Rev. 0 | Issue Date: 18.06.2023

LANDING FEES			FIREFIGHTING FEES			TOTALS:	
MTOW	ARR	DEP	тот	ARR	DEP	тот	(PAX excluded*)
1	€ 1,58	€ 1,58	€ 3,16	€ 3,13	€ 3,13	€ 6,26	€ 9,42
2	€ 3,16	€ 3,16	€ 6,32	€ 6,26	€ 6,26	€ 12,52	€ 18,84
3	€ 4,74	€ 4,74	€ 9,48	€ 9,39	€ 9,39	€ 18,78	€ 28,26
4	€ 6,32	€ 6,32	€ 12,64	€ 12,52	€ 12,52	€ 25,04	€ 37,68
5	€ 7,90	€ 7,90	€ 15,80	€ 15,65	€ 15,65	€ 31,30	€ 47,10
6	€ 9,48	€ 9,48	€ 18,96	€ 18,78	€ 18,78	€ 37,56	€ 56,52
7	€ 11,06	€ 11,06	€ 22,12	€ 21,91	€ 21,91	€ 43,82	€ 65,94
8	€ 12,64	€ 12,64	€ 25,28	€ 25,04	€ 25,04	€ 50,08	€ 75,36
9	€ 14,22	€ 14,22	€ 28,44	€ 28,17	€ 28,17	€ 56,34	€ 84,78
10	€ 15,80	€ 15,80	€ 31,60	€ 31,30	€ 31,30	€ 62,60	€ 94,20

3.7 - LIMB - LANDING + FIREFIGHTING FEES

USEFUL LINKS

ITEM:	LINK:	NOTE:
LIMB VFR CHARTS	https://drive.google.com/drive/folders/1eGf- wJcOlltNOjWZXEh02b6jkNjDSoV4?usp=sharing	DESPICTED CHART MAY BE OUTDATED. USE ONLY FOR TRAINING PURPOSING AND REFERENCES ONLY
PNR (Prior Notification Required Form)	https://services.aeroclubmilano.it/v2/pnr	/
Safety Reports	https://drive.google.com/drive/folders/1rtueGN81XeZo7p- 11S5zx0VJxk8UIABX?usp=share_link	IF ANY NEEDED, FILL AND SEND IT TO: ato@aeroclubmilano.it
Present Weather (Weather Station)	https://www.aeroclubmilano.it/meteo/	/
LIMB Webcam	https://www.aeroclubmilano.it/aeroporto/webcam/	/

FEEDBACK FORM

- You are our customer and we are here to help you
- Every feedback is important for us to empower our facilities!
- · Your feedback is completely anonymous; we protect your privacy :-)

Link: https://docs.google.com/forms/d/14IQYTrWxdzK7Lz4K1Y_2UusQG6B_Fn_Jcl3Iw2JGux8/prefill



PROJECT © Dolce Samuele